

COBY MP3 PLAYER NAVIGATION & CONTROLS

For those who purchased the pre-loaded Coby MP3 player with the Dreampad

ON: Slide the Power/Hold Switch (#6) on the right side of the player down and wait a few seconds.

NAVIGATION: Use the scroll buttons to navigate the player menu (#3).

SELECT, PLAY/PAUSE: (#4) Use to enter selections on the player.

CHOOSE MUSIC: Select “Music” from the main menu, select “Albums”, select your program, select first song and the entire program will play.

VOLUME: Use the up/down controls (#3) while song is playing to increase or decrease volume level respectively.

HOLD: Slide the Power/HOLD switch up (#6).

OFF: Slide the Power Switch down and hold for a few seconds (#6).

SHUFFLE & REPEAT MODE: While a song is playing, press the Option button (#5). Select “Play Mode”, Select “Shuffle” or “Repeat” (#5). In repeat mode the music will play continuously until stopped by the user.

RESET: If your player is not functioning properly, press the reset button on the rear of the player (#9).

CONTROLS:

1. Navigation Display
2. Menu/Back Button (*Hold for 3 seconds to go to main menu*)
3. Scroll Up/Down and Left/Right
4. Select/Play Button
5. Option Button
6. HOLD Switch/Power Switch (on right side of player)
7. Charging Port
8. Headphone Jack for Dreampad plug
9. Reset Button (on rear of player)

